


## SEALANT

M1121000500269

Item	Specified sealant	Remark
Oil pressure switch	3M ATD Part No. 8660 or equivalent	Semi-drying sealant

## SPECIAL TOOLS


M1121000600460

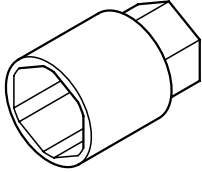Tool	Number	Name	Use
	MD998054	Oil pressure switch wrench	Removal and installation of oil pressure switch

## ON-VEHICLE SERVICE

### ENGINE OIL CHECK

M1121000900438

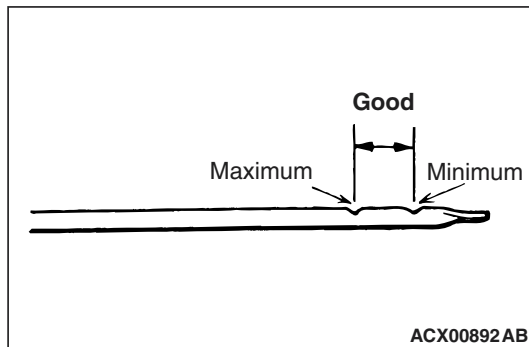

1. Pull out the engine oil level gauge slowly and check that the oil level is in the illustrated range.
2. Check that the oil is not excessively dirty, that there is no coolant or petrol mixed in, and that it has sufficient viscosity.

### ENGINE OIL REPLACEMENT


M1121001000513

1. Start the engine and allow it to warm up until the temperature of the coolant reaches 80°C to 90°C.

#### **WARNING**


**Use care as oil could be hot.**

2. Remove the engine oil filler cap.
3. Remove the drain plug to drain oil.

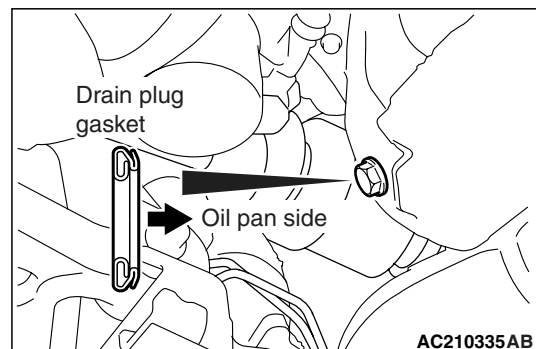

4. Install a new drain plug gasket so that it faces in the direction shown in the illustration, and then tighten the drain plug to the specified torque.

**Tightening torque: 39 ± 5 N·m**

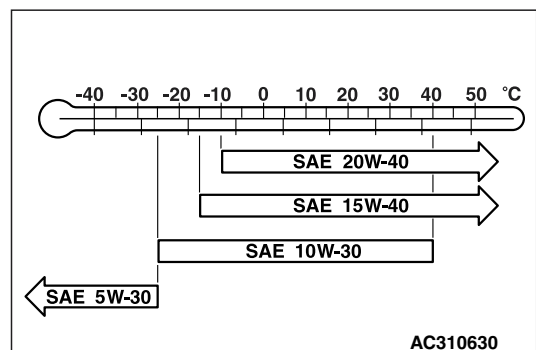

5. Refill with specified quantity of engine oil.

**Specified Engine Oil (ACEA and API classification): ACEA A1, A2 or A3/API SG or higher**  
**Total quantity (Includes volume inside oil filter and oil cooler): 5.1 L**