

MITSUBISHI

ENGINE ELECTRICAL

WORKSHOP MANUAL

FOREWORD

This Workshop Manual contains procedures for removal, disassembly, inspection, adjustment, reassembly and installation, etc. for service mechanics.

All information, illustrations and product descriptions contained in this manual are current as at the time of publication. We, however, reserve the right to make changes at any time without prior notice or obligation.

Charging System **16A**

Starting System **16B**

Ignition System **16C**

Glow System **16D**

FILING INSTRUCTION

Please keep these manual pages in the binder No. BN890001.

File these pages according to the signs "Added", "Revised" and "Deleted" on the "List of effective pages" which are interpreted below.

Added: File the pages with this label additionally in your manual.

Revised.Deleted: Replace the existing pages with the corresponding pages with this sign.


Missing sheets will be supplied upon request.



INTRODUCTION

EXPLANATION OF MANUAL CONTENTS

Maintenance and Servicing Procedures

- (1) A diagram of the component parts is provided near the front of each section in order to give the reader a better understanding of the installed condition of component parts.
- (2) The numbers provided within the diagram indicate the sequence for maintenance and servicing procedures; the symbol  indicates a non-reusable part; the tightening torque is provided where applicable.

- **Removal steps:**
The part designation number corresponds to the number in the illustration to indicate removal steps.
- **Disassembly steps:**
The part designation number corresponds to the number in the illustration to indicate disassembly steps.
- **Installation steps:**
Specified in case installation is impossible in reverse order of removal steps. Omitted if installation is possible in reverse order of removal steps.
- **Reassembly steps:**
Specified in case reassembly is impossible in reverse order of disassembly steps. Omitted if reassembly is possible in reverse order of disassembly steps.





Classification of Major Maintenance/Service Points

When there are major points relative to maintenance and servicing procedures (such as essential maintenance and service points, maintenance and service standard values, information regarding the use of special tools, etc.), these are arranged together as major maintenance and service points and explained in detail.

- ◀▶: Indicates that there are essential points for removal or disassembly.
▶▶: Indicates that there are essential points for installation or reassembly.

Symbols for Lubrication, Sealants and Adhesives

Information concerning the locations for lubrication and for application of sealants and adhesives is provided, by using symbols, in the diagram of component parts, or on the page following the component parts page, and explained.

-  Grease
(multipurpose grease unless there is a brand or type specified)
-  Sealant or adhesive
-  Brake fluid, automatic transmission fluid
or air conditioner compressor oil
-  Engine oil or gear oil

INTRODUCTION

Indicates the group title.

Indicates the section title.

Indicates the group number.

Indicates the section number.

Indicates the page number.

6A1 ENGINE – Water Pump and Water Pipe

11A-7-1

7. WATER PUMP AND WATER PIPE REMOVAL AND INSTALLATION


Denotes tightening torque.

Nm Kgm ft.lbs.

Denotes non-reusable part.

This number corresponds to the number appearing in "Removal steps", "Disassembly steps", "Installation steps" or "Reassembly steps".

Operating procedures, cautions, etc. on removal, installation, disassembly and reassembly are described.

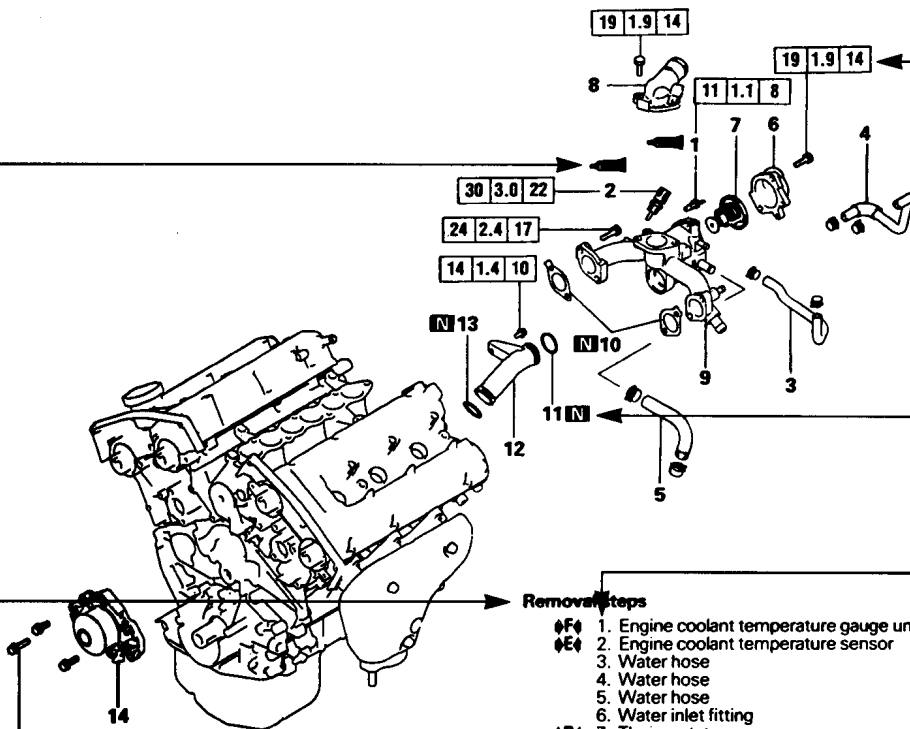

Removal steps


- 1. Engine coolant temperature gauge unit
- 2. Engine coolant temperature sensor
- 3. Water hose
- 4. Water hose
- 5. Water hose
- 6. Water inlet fitting
- 7. Thermostat
- 8. Water outlet fitting
- 9. Thermostat housing
- 10. Gasket
- 11. O-ring
- 12. Water pipe
- 13. O-ring
- 14. Water pump

6AE0189

INSTALLATION SERVICE POINTS

SEALANT APPLICATION TO WATER PUMP

Specified sealant:
Mitsubishi Genuine Part No. MD970389 or equivalent

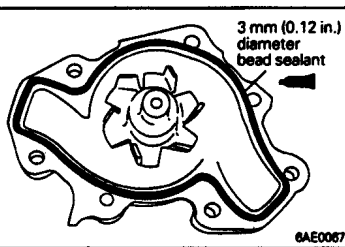

6AE0067

© Mitsubishi Motors Corporation Dec. 1982

PWEE322

Issue date

Publication
number-
Revision code

List of Effective Pages

Page	Revision code	Date	Remarks	Page	Revision code	Date	Remarks
16A-0-1	E	Dec. 1995		16C-0-3		Apr. 1990	
16A-0-3		Apr. 1990		16C-0-4	A	Dec. 1991	
16A-1-1	E	Dec. 1995		16C-0-5		Apr. 1990	
16A-2-1	D	Feb. 1995		16C-1-1	D	Feb. 1995	
16A-2-2	A	Dec. 1991		16C-1-2	E	Dec. 1995	
16A-2-3	D	Feb. 1995		16C-1-3 to 16C-1-5	F	Feb. 1997	Revised
16A-2-4 and 16A-2-5	C	Feb. 1994		16C-1-6	D	Feb. 1995	
16A-2-6	D	Feb. 1995		16C-1-7	F	Feb. 1997	Revised
16A-2-7	C	Feb. 1994		16C-2-1 and 16C-2-2	A	Dec. 1991	
16A-3-1	D	Feb. 1995		16C-2-3 and 16C-2-4	D	Feb. 1995	
16A-3-1a and 16A-3-1b	D	Feb. 1995		16C-2-4a	F	Feb. 1997	Revised
16A-3-2	D	Feb. 1995		16C-2-4b and 16C-2-5	D	Feb. 1995	
16A-3-2a and 16A-3-2b	D	Feb. 1995		16C-2-5a to 16C-2-5c	C	Feb. 1994	
16A-3-3 to 16A-3-10	D	Feb. 1995		16C-2-5d	B	Dec. 1992	
16A-4-1 and 16A-4-2	D	Feb. 1995		16C-2-5e and 16C-2-5f	F	Feb. 1997	Added
16A-4-3	E	Dec. 1995		16C-2-6	D	Feb. 1995	
16A-4-4 to 16A-4-6	D	Feb. 1995		16C-2-7 to 16C-2-10	F	Feb. 1997	Revised
				16C-2-11	F	Feb. 1997	Added
16B-0-1	E	Dec. 1995		16C-3-1 and 16C-3-2		Apr. 1990	
16B-0-3	E	Dec. 1995		16C-3-3	D	Feb. 1995	
16B-0-4	D	Feb. 1995		16C-4-1 to 16C-4-5	D	Feb. 1995	
16B-1-1	E	Dec. 1995		16C-5-1 to 16C-5-3	D	Feb. 1995	
16B-2-1	D	Feb. 1995		16C-6-1 to 16C-6-4	D	Feb. 1995	
16B-2-2 and 16B-2-3		Apr. 1990		16C-7-1 to 16C-7-5	D	Feb. 1995	
16B-3-1 to 16B-3-8	D	Feb. 1995					
16B-4-1 to 16B-4-12	E	Dec. 1995		16D-0-1	E	Dec. 1995	
				16D-1-1	D	Feb. 1995	
16C-0-1	E	Dec. 1995		16D-2-1 and 16D-2-2	D	Feb. 1995	

Missing sheets will be supplied upon request.

PWEE9025-F